

VOICE ZONE 4-ALARM TALKING WATCH INSTRUCTIONS

FEATURES:

This 4-Alarm Talking Watch provides useful functions to run your daily routines more efficiently. For example, you can set up the 4 talking alarms to remind you of 4 medicine-taking times, or use the talking stopwatch to time and track your activities. Its features include:

Time and Date Announcement – let you hear the time as well as the date announcement

Four Talking Alarms – helps remind you of daily routines

Talking Stopwatch with Lap – lets you keep track of your time spent on activities and record lap times

Hourly Time Announcement – lets you hear the time every hour on the hour

100 Year Calendar – gives you the correct date from 1990 to 2090

SETTING THE TIME, YEAR, MONTH & DATE:

Note: While setting the time and date, if you do not press any key for more than one minute, the watch automatically returns to the current time display. Follow these steps to set the date and time.

1. Repeatedly press **MODE** until you hear the time announcement and the display shows the time and day of the week.
2. Press and hold down **SET** for more than 2 seconds until you hear “TIME SET, HOUR SET” and the hour digits flash on the display.
3. Repeatedly press (or hold down) **ADJ** to set the correct hour. The watch announces the hour as it advances on the display.
4. Press **SET**, you hear “MINUTE SET” and the minute digits flash.
5. Repeatedly press (or hold down) **ADJ** to set the correct minute. The watch announces the minute as it advances on the display.
6. Press **SET**, you hear “YEAR SET” and the year digits flash.
7. Repeatedly press (or hold down) **ADJ** to set the correct year.
8. Press **SET**, you hear “MONTH SET” and the date digits flash.
9. Repeatedly press (or hold down) **ADJ** to set the correct month.
10. Press **SET**, you hear “DATE SET” and the date digits flash.
11. Repeatedly press (or hold down) **ADJ** to set the correct date.
12. Press **MODE** to complete setting and return to the time display.

LISTENING TO THE TIME AND DATE ANNOUNCEMENTS:

To hear the time announcement, simply press **TALKING**. The watch announces for example “It is ten twenty-five AM.” To hear the date announcement, press **SET**, the watch reports for example “today is the twenty-third” if the date 10/23 appears on the

display (October is not announced). Press **SET** again, it displays the year, press **SET** again to return to normal time display.

SETTING THE ALARM TIME

The watch lets you set four daily alarms; follow these steps to set the alarm.

1. Repeatedly press **MODE** until you hear “ALARM ONE” and **AL** and – 1 appear on the LCD display.
2. Press and hold down **SET** for more than two seconds until you hear “ALARM ONE SET, HOUR SET” and the hour digits flash on the display.
3. Repeatedly press (or hold down) **ADJ** to set the hour. The watch announces the hour as it advances on the display.
4. Press **SET**, you will hear “MINUTE SET” and the minute digits flash.
5. Repeatedly press (or hold down) **ADJ** to set the minute. The watch announces the minute as it advances on the display.
6. Press **MODE** to complete ALARM 1 time setting.
7. Repeatedly press **ADJ** until you hear “ALARM ONE ON” and the bell symbol appears on the display to turn on the alarm.
8. Repeat steps 1 thru 7 to set alarm 2, 3, and 4.
9. Repeatedly press **MODE** until you hear the current time announcement to return to the time display.

TURNING THE ALARM ON AND OFF:

You can easily turn on and turn off the alarm using the following steps.

1. Repeatedly press **MODE** until you hear “ALARM ONE”
2. To turn on the alarm, repeatedly press **ADJ** until you hear “ALARM ONE ON” and the bell symbol appears on the display to turn on the alarm.
3. Press **MODE** to go to Alarm Two and repeatedly press **ADJ** to turn on and off alarm two
4. Repeat step 3 for Alarm 3 and Alarm 4

At the preset alarm time, the alarm sounds for one minute and turns off automatically. To silence the alarm sooner, press any key or button. The following is an example of the alarm sound. “Alarm two, good morning, it is seven-thirty AM beep, beep, beep, beep” repeating for one minute.

TURNING THE HOURLY TIME ANNOUNCEMENT ON OR OFF:

You can set the watch to announce the time every hour on the hour from 6:00AM to 10:00PM. To turn on the hourly report, repeatedly press **ADJ** until you hear “HOURLY REPORT ON”. To turn off the Hourly Report, press **ADJ** again until you hear “HOURLY REPORT OFF”. The following is an example of the hourly report. “It is eight o’clock AM” ... time lapse one hour ... “It is nine o’clock AM”.

USING THE STOPWATCH (COUNT-UP TIMER)

The maximum count-up timer (stopwatch) is 24 hours. When the timer reaches 23:59:59, it resets to 00:00:00 and begins counting up again. Follow these steps to operate the stopwatch.

1. Repeatedly press **MODE** until you hear “STOPWATCH” and **ST** appears on the display.
2. If the display does not show 00:00:00, follow these steps to reset to zero.
Case 1: When the time is not running (digits do not change, and “:” is not flashing) press **SET** once or twice until 00:00:00 appears on the display.

Case 2: When the time is running in the front (digits are changing) press **ADJ** then **SET** to reset to 00:00:00.

Case 3: When the timer is running in the background (digits do not change and ‘:’ is flashing) press **ADJ** then **SET** twice to reset to 00:00:00.

3. Press **ADJ** to start the timer. The stopwatch starts and announces timing.
4. To stop of pause count-up, press **ADJ**. To resume the timer, press **ADJ** again and the stopwatch timer continues from the displayed time.
5. To reset the timer to 00:00:00, press **ADJ** to stop the timer, and then press **SET**.

RECORDING LAP TIMES

The lap function lets you freeze the display, document the timed reading, and then return to the stopwatch timer to see the advancing time. You can monitor lap times continuously as long as the stop watch continues to run. Follow these steps to measure lap times.

1. Repeatedly press **MODE** until you hear “STOPWATCH” and **ST** appears on the display.
2. Press **ADJ** to start the stopwatch timer.
3. When the first lap is finished, press **SET**. The stop watch display freezes, but the stopwatch timer continues to run in the background. The ‘:’ in the elapsed time flashes.
4. When you have documented the lap time, press **SET**. The display changes to show the advancing time (was in the background) on the stopwatch timer.
5. Repeat steps 3 and 4 for each additional lap.
6. Press **ADJ** to stop the stopwatch. Then press **SET** to reset the display to 00:00:00.

The stopwatch announces the elapsed time according to the following:

Elapsed Time	Voice Announcement
1 to 10 seconds	each/every second
11 seconds to 1 minute	every 10 seconds

1 to 10 minutes
10 minutes to 24 hours

every minute
every 10 minutes

During time, you can press **TALKING** to hear the voice announcement at any time.

REPLACING THE BATTERIES

If the watch works improperly or the display dims, follow these steps to replace the lithium battery.

NOTE: All metal models use CR2016 battery. All plastic models use CR2025 lithium battery except for models WA9910 and WA9911 which use CR2016.

For metal models follow these steps to install or replace battery.

1. Locate the gap in between the back case and the watch body, insert a small flat-end screwdriver into the gap and pry open the back case.
2. Use a small screwdriver to remove the screw holding the battery bar.
3. Remove the old battery and install a new one with the positive side (+) up.
4. Replace the battery bar and secure it with the screw.
5. Replace and snap the back case to the watch by pressing the back case to the watch body.

For plastic models follow these steps to install or replace battery.

1. Loosen the four screws on the back cover and remove it.
For models WA9910 and WA9911, you have to remove the watch bands before the back cover can be removed.
2. For all models, except WA9910 and WA9911, use your finger to press down the metal clip in the middle position and push it toward one end. Insert the tip of a small screwdriver in the gap at the end of the clip to pry open and remove the metal clip. For WA9910 and WA9911, use a small screwdriver to remove the two screws holding the battery bar.
3. Remove the old battery and install a new one with the positive side (+) up.
4. Replace the cover and fasten the screw.